 






 
 
 
 


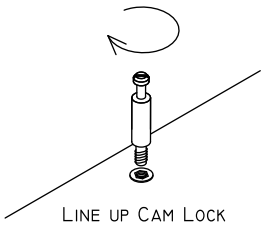
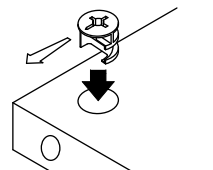
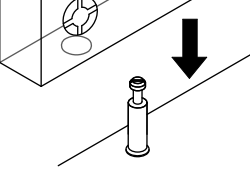
HARDWARE

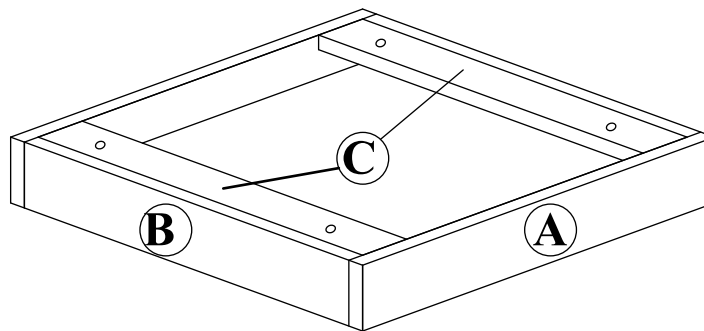
1  CAM LOCK 4 Pcs	2  KLIx CAM 4 Pcs	3  HOUSING CAP (LONG) 4 Pcs	4  SCREW M6 x 40MM 4 Pcs	5  WASHER 4 Pcs	6  M4 x 65 ALLEN-KEY 1 Pc	7  ADJUSTABLE GLIDE 6 Pcs
--	--	---	--	---	---	---

COMPONENTS

A  FRONT/BACK PANEL	B  SIDE PANEL x 2	C  BOTTOM RAIL x 2	D  COMPOSE END TABLE CUBE (SOLD SEPERATELY)
--	---	---	--

KLIx CAM INSTRUCTIONS

1  LINE UP CAM LOCK TURN CLOCKWISE.	2  INSERT THE CAM WITH THE ARROW POINTING TOWARDS THE HOLE IN THE EDGE.	3  INSERT THE CAM LOCK INTO KLIx CAM. TURN KLIx CAM TO LOCK.
---	--	---



IMPORTANT NOTE :

- Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

